## Table 1: Summary of JR3 DSP Data locations

_	0x00	0x01	0x02	0x03	0x04	0x05	0x06	0x07
0x00	ch0time	ch0data			ch1time	ch1data		
80x0	ch2time	ch2data			ch3time	ch3data		
0x38	chEtime	chEdata			chFtime	chFdata		
0x40	'C '	'o '	'p '	'y '	'r '	'i '	'g '	'h '
0x48	't '	' '	'J '	'R '	'3 '	','	1.1	Τ'
0x50	'n '	'c '	1.1	'1 '	'9 '	'9 '	'4 '	0
0x58								
0x60	shunt fx	shunt fy	shunt fz	shunt mx	shunt my	shunt mz		
0x68	def fs fx	def fs fy	def fs fz	def fs mx	def fs my	def fs mz		load env #
0x70	min fs fx	min fs fy	min fs fz	min fs mx	min fs my	min fs mz		xForm #
0x78	max fs fx	max fs fy	max fs fz	max fs mx	max fs my	max fs mz		peak addr
0x80	fs fx	fs fy	fs fz	fs mx	fs my	fs mz	fs v1	fs v2
0x88	ofs fx	ofs fy	ofs fz	ofs mx	ofs my	ofs mz	ofs#	vect axes
0x90	f0 fx	f0 fy	f0 fz	f0 mx	f0 my	f0 mz	f0 v1	f0 v2
0x98	f1 fx	f1 fy	f1 fz	f1 mx	f1 my	f1 mz	f1 v1	f1 v2
0xa0	f2 fx	f2 fy	f2 fz	f2 mx	f2 my	f2 mz	f2 v1	f2 v2
0xa8	f3 fx	f3 fy	f3 fz	f3 mx	f3 my	f3 mz	f3 v1	f3 v2
0xb0	f4 fx	f4 fy	f4 fz	f4 mx	f4 my	f4 mz	f4 v1	f4 v2
0xb8	f5 fx	f5 fy	f5 fz	f5 mx	f5 my	f5 mz	f5 v1	f5 v2
0xc0	f6 fx	f6 fy	f6 fz	f6 mx	f6 my	f6 mz	f6 v1	f6 v2
0xc8	rate fx	rate fy	rate fz	rate mx	rate my	rate mz	rate v1	rate v2
0xd0	min fx	min fy	min fz	min mx	min my	min mz	min v1	min v2
0xd8	max fx	max fy	max fz	max mx	max my	max mz	max v1	max v2
0xe0	near sat	sat	rate addr	rate div	rate count	comm 2	comm 1	comm 0
0xe8	count 1	count 2	count 3	count 4	count 5	count 6	errors	count x
0xf0	warning	error	threshold	crc	rom ver #	ver no	ver day	ver year
0xf8	serial	model	cal day	cal year	units	bits	chans	thickness

0x100-0x1ff - Load envelope table (threshold monitoring), 16 entries 0x200-0x2ff - Transform table (translations and rotations), 16 entries

Description of table entrys, see text for full description and missing entries:

ch0time, ch0data time last data for channel 0 was received, last data received for raw channel 0

shunt fx,... def fs fx,...

shunt reading for fx channel sensor default full scale min full scale, at which the data will not have the lsb zero filled max full scale, at which the data will not have the lsb truncated full scale value for fx, when fx = 16384 this is the equivalent eng number of currently active load envelope number of the transform currently in use addr of the data used in finding the maxima and minima current offset value for fx number of the offset currently in use min fs fx,... max fs fx,...

full scale value for fx, when fx = 16384 this is the equivalent engineering units fs fx,...

load env # xForm #

peak addr

ofs fx,...

ofs#

vect axes bit map for the axes which are being used for calculating the vectors

f0 fx,f0 fy,... decoupled, unfiltered data

f1 fx,... fx from filter 1 rate fx,... rate calculation for fx

min fx,..., max fx,...
minimum peak (valley) value for fx, maximum peak value for fx
near sat, sat
raw value which sets near sat bit in warning word, and sat bit in
rate addr
address of data used for calculating the rate data

raw value which sets near sat bit in warning word, and sat bit in the error word

address of data used for calculating the rate data

rate div rate divisor, the number of samples between rate calculations rate count this counter counts up to rate div, and then the rates are calculated comm2,... command word 2, 1 and 0. Area used to send commands to JR3 DSP

counter for filter #1, 1 count = 1 filter iteration count1,...

a count of data reception errors errors

warning, error, threshold warning word, error word, threshold monitoring word (load envelopes)

version no. of data stored in sensor EEProm rom ver no

ver no, ver day software version # that the JR3 DSP is running, JR3 DSP software release date

serial, model sensor serial number, and sensor model number

cal day last calibration date of the sensor

units engineering units of full scale, 0 is lbs, in-lbs and in\*1000, 1 is Newtons, ...

bits number of bits in sensor ADC

chans bit map of channels the sensor is capable of sending

thickness the thickness of the sensor